 


Slim High Speed Hand Dryer

User Manual & Operation Instructions

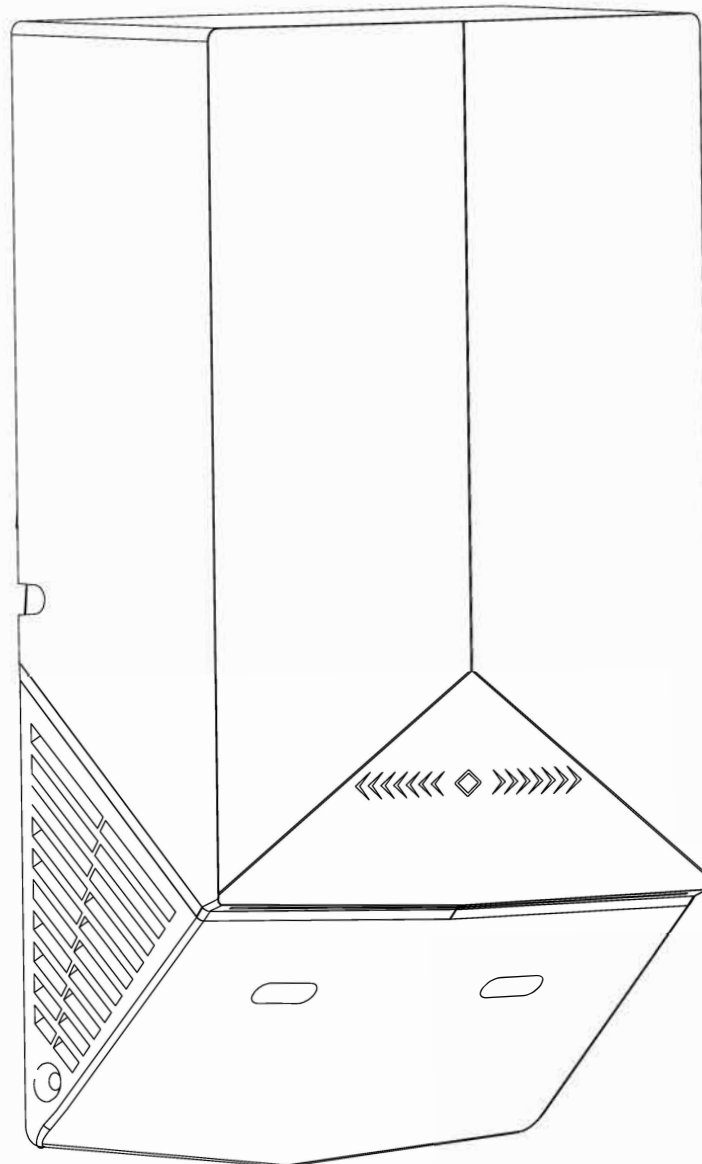

Dear customer:

Thank you for your purchase of this quality Aertek product.

Please read this instruction book before installation and keep it for installation and usage or any other further

Features

1. When the hand dryer is powered on, please wait 1 second to calibrate. This machine can sense the vertical distance of objects by about 5 - 10cm.

2.It has high speed motor to dry hands within 10 seconds.

3.It only needs wall plugs and screws for installation, then hang the machine, ensure to cut off the power when maintaining.

It is suitable for all departments in hospitals, schools, food and pharmaceutical manufacturers, airports, office buildings, hotels, government agencies and research institutions and other places.

4. This series product is fitted with over current protection for the user's safety.

Technical parameters

Rated Voltage:	AC220-240V
Rated Frequency:	50/60HZ
Rated Power:	800-1900W
Temperature:	40°C (heater working) 30°C (heater not working)
Installation:	Wall Mounting
Waterproof Grade:	IP24
Wind Speed:	160m/s
Noise Level:	75-79dB
Drying Time:	7-9S
Overall size:	395*234*100mm

Note before installation



Warning

1. Do not fit in a location with water or water vapour on the surface or install in a bathroom with heavy moisture in order to avoid electric shock.
2. You must commission a professional electrician to install power supply to avoid electric shock hazard.
3. You must cut off power before installation.
4. It is advised to install a circuit protection device such as RCD or RCBO.
5. Do not dismantle, repair or make any alteration of this machine without authorization, otherwise there is a risk of electric shock, fire and other accidents.




Attention

1. Ensure there are no surfaces below and within 400mm of the dryer. Also, do not install above the stainless steel, artificial marble or any other reflective surface otherwise the dryer may be prone to mis-operation.
2. The backplate should be firmly fixed to the smooth wall surface to avoid product damage.
3. Do not install in areas with corrosive or flammable gases or objects, it may cause fire or product failure and malfunction.
4. Do not install the products in dusty or high temperature environments, it may cause product damage.


Product Overview

- ① Cover
- ② Hidden Touch Switch
- ③ Power Inlet
- ④ Decorative Strip
- ⑤ Louvered air intake
- ⑥ Screw Hole
- ⑦ Power LED Lights
- ⑧ Air Outlet
- ⑨ Sensors

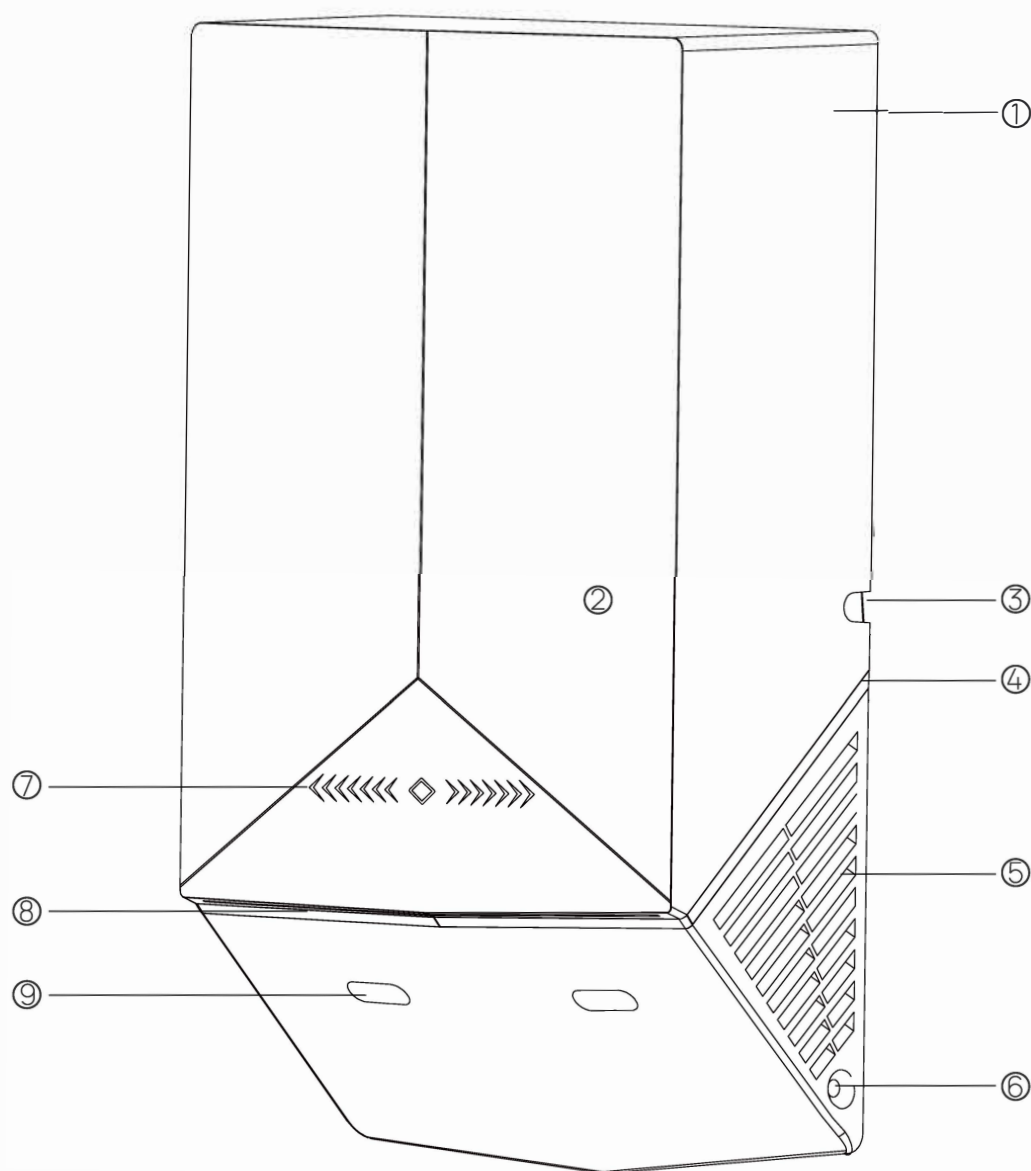


Components Name


REAR ELEVATION

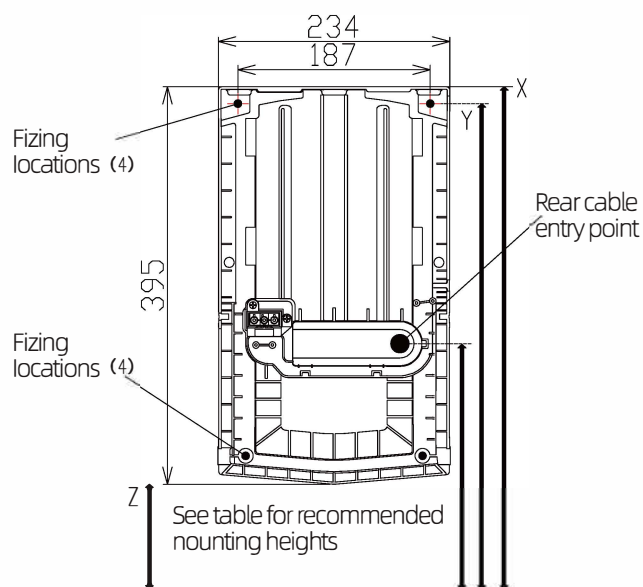


SIDE ELEVATION

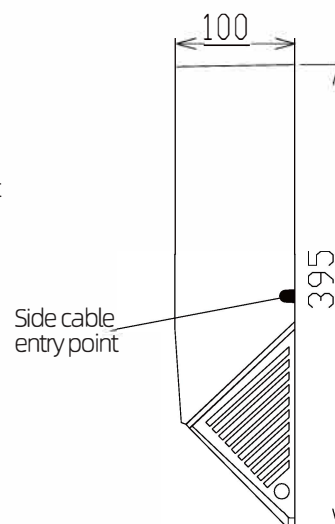


Open power connection

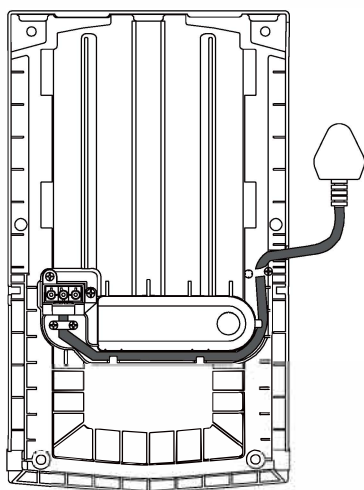

Hidden power connection

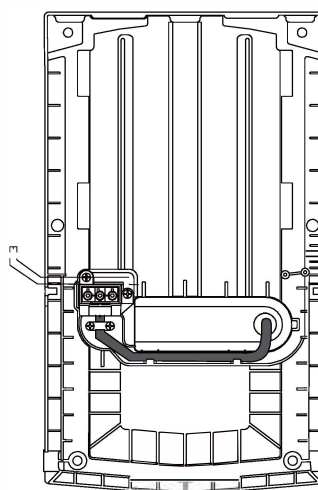

Method of Installation

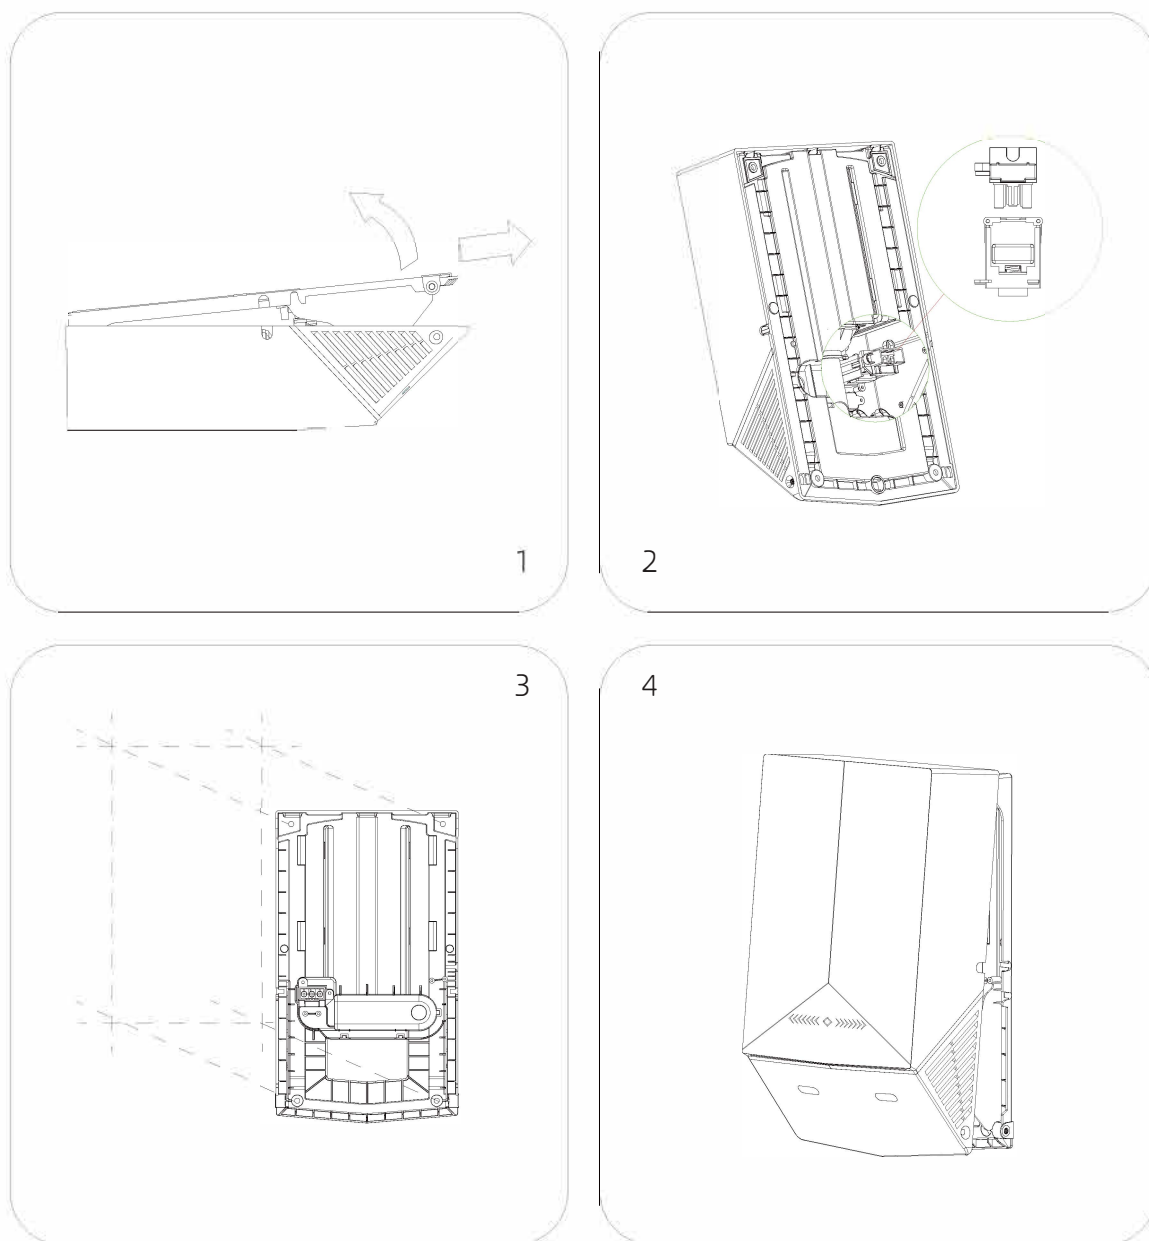

1. Loosen the side screws;
2. Connect and install the power cord;
3. Mark and drill the holes according to the desired height and install the backplate;
4. Install the cover and tighten the screws.

Replace Filter


Attention

Attention: If the air power slows, please replace the filter. We suggest replacing the filter every 3 months.


How to replace the Filter:

1. Open the right side covers as the picture shows, take off the wire which connect with the switches.


NOTE: This side houses a PCB with multiple wires inside, please do not remove it!!!

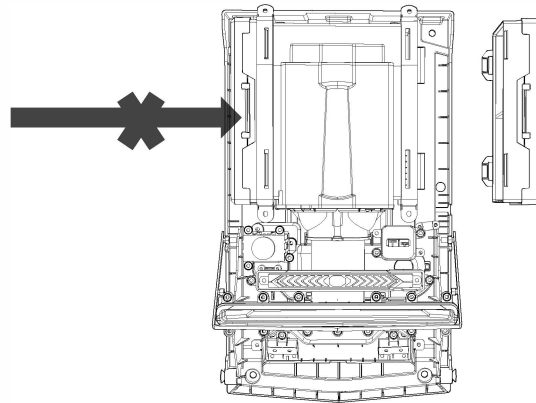

2. Take the filter out of the right hand side.


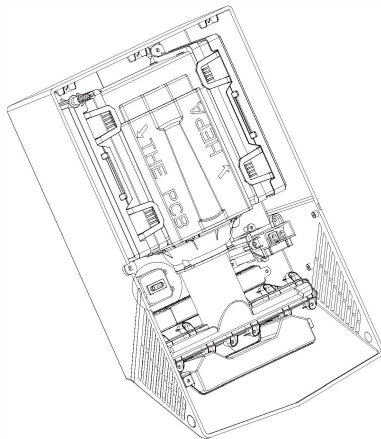


3. Replace with new filter.

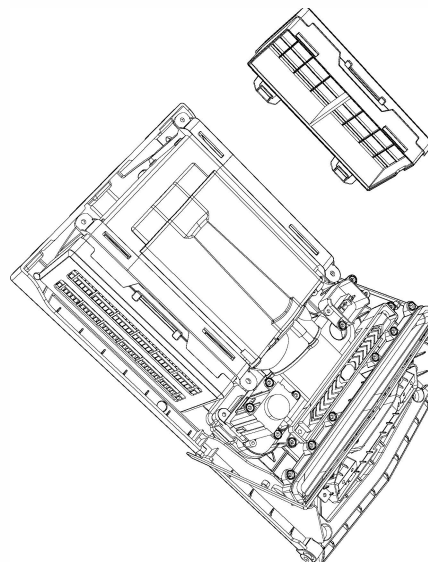

Replace Filter


4. Remove the filter and replace it with a new one.

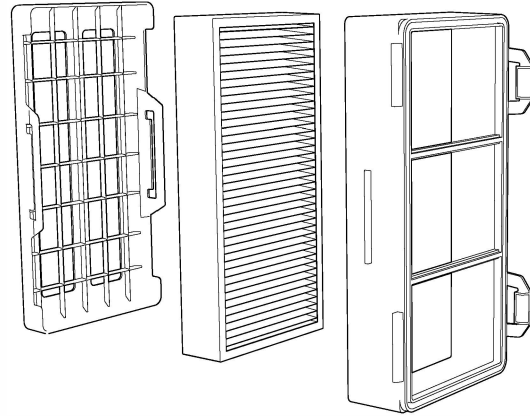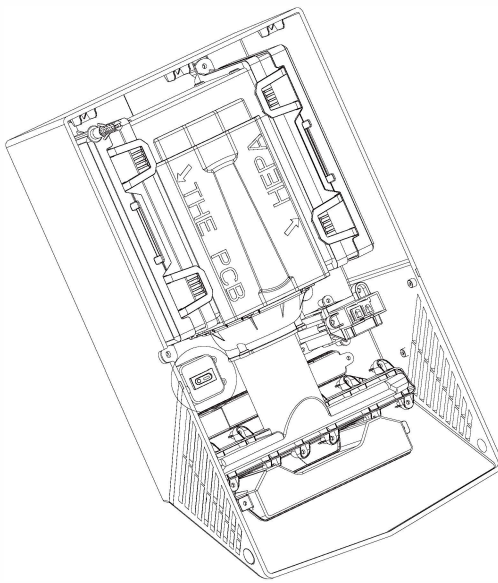

5. Install the replaced filter

6. Install the whole machine back.



NOTE: After the machine is powered on again, please click on the area shown in the image to reset the data, otherwise the running light and buzzer will still sound.

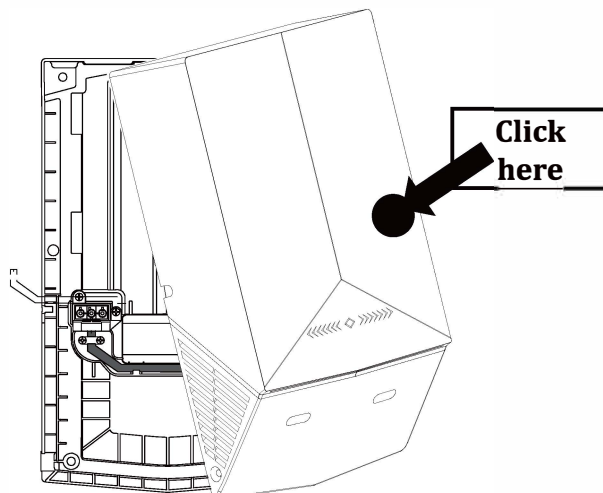


Instructions

How to use?

1. Extend your hands to the air outlet

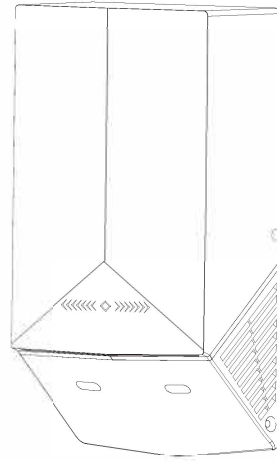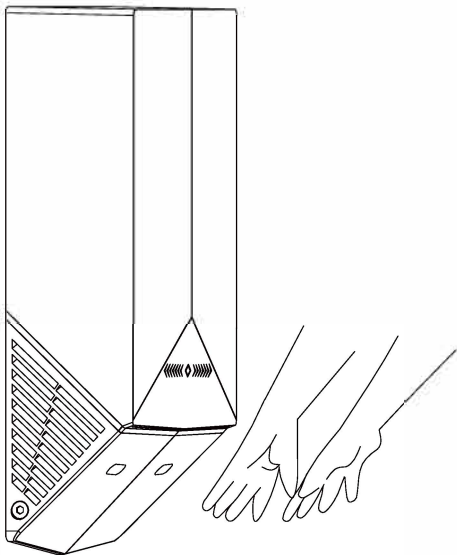

2. Slowly move your hands up and down, letting the air blow the water off your hands


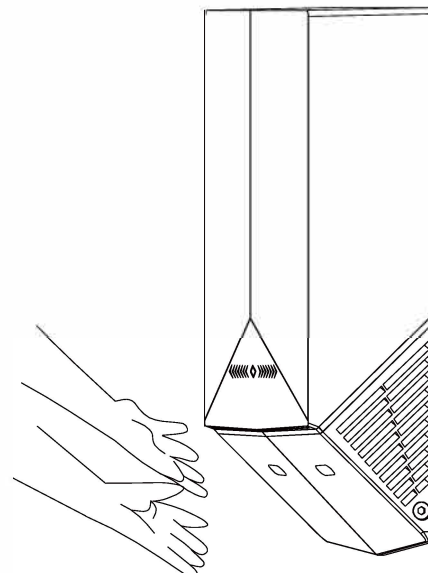


3. The drying process should take about 7-9 seconds

Instructions

This product has two hot and cold air drying modes, so that users can manually adjust according to the ambient temperature or for energy saving. Mode switching, it is recommended that the ambient temperature is lower than 25°C

You can turn on the hot air switch in cold weather, and turn off if the temperature is higher than 25°C. The position of the switch is shown in the image.

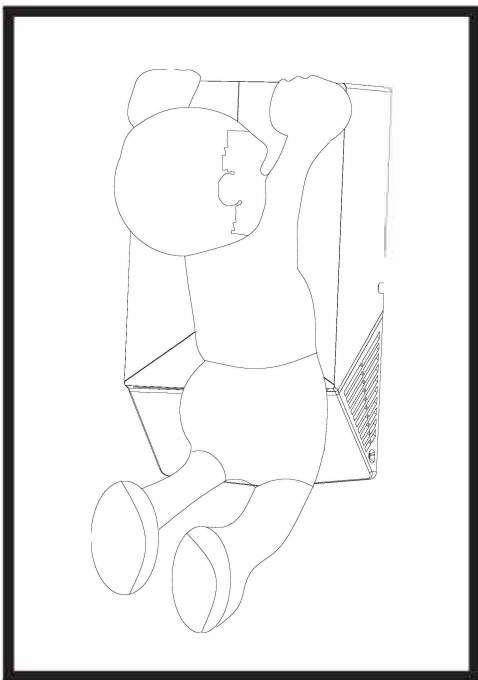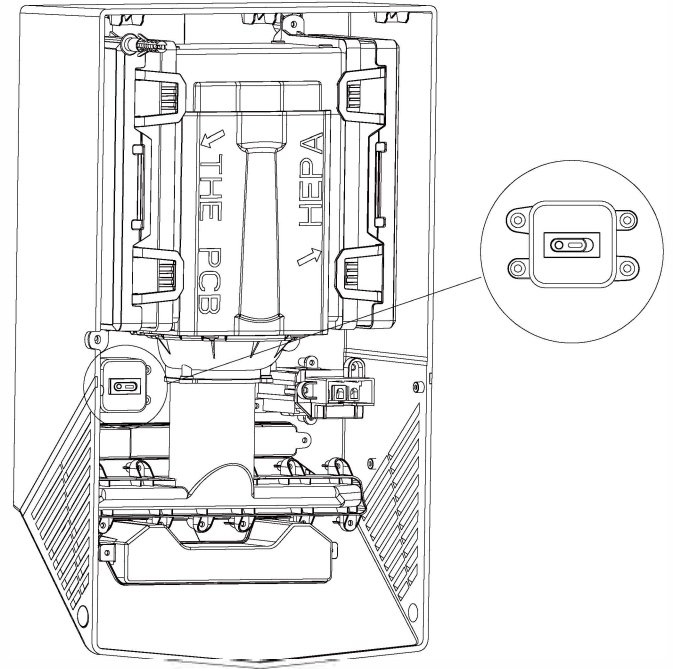

1. Do not let children hang on the machine.
2. Do not use the machine below -10°C or above 40°C
3. Do not use the machine in places where it is directly sprayed with water
4. Do not use the machine in strong direct sunlight
5. Do not use the machine in places prone to condensation

Instructions

1. Please cut off the power and clean the shell with natural detergent when it is dirty. **Do not** use acidic and alkalescent bathroom detergent and BEN, lacquer thinner, abrasive etc

Do not use nylon brush or other product which may result in the surface being scratched;

2. When cleaning the shell, prevent water droplets entering the machine so as to avoid electric shock or short circuit;

3. It's better to cut off the power supply when off duty, to extend the service life;

4. If the power software cord is damaged, it should be replaced with appropriately rated cable and fitted by qualified electrician.

5. If the machine malfunctions, cut the power supply and stop using.

Please contact your supplier or a professional electrician to repair it.;

6. If it is not likely to be used for a long time, please cut off the power, and store it in a clean and dry indoors and sealed after cleaning.

Terms of guaranteed

1. The product warranty period is one year.
2. With regular air filter replacement, the warranty is extended to 2 years.
3. Within warranty period, if the machine fails due to manufacturing fault, please contact the supplier for repair or replacement. Ensure you retain the original invoices and the completed quality assurance card stamped by dealers.
4. The following are not in the scope of the warranty:
 - ◆ Improper use and/or fault caused by dismantling, alteration or repair by technical persons without manufacturer's authorization.
 - ◆ Fires, earthquakes, lightening and other natural disasters or power surges.
 - ◆ Faults arising by incorrect power supply.
 - ◆ The faults caused by long time operation in bad working condition.
 - ◆ Not completing or incorrect completion of the quality assurance card.
5. We will always endeavour to assist with any product that is beyond the warranty period.

Notice

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance

Cleaning and user maintenance should not be made by children without supervision

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

Children being supervised should not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

aertek

VTX